



2003 Maintenance Schedule

1.8L

	Kilometers		8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160	168
	Miles		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105
Engine Oil – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Engine Filter – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Timing Belt – check									•									•					
Timing Belt – replace																							•
Timing Belt Tensioner – replace																							•
V-belt/Ribbed Belt – check									•									•					
V-belt – replace																		•					
Spark Plugs – replace									•									•					
Air Cleaner – replace filter									•									•					
W/W Fluid – check level		•		•		•		•		•		•		•		•		•		•		•	
Auto-Shift Lock – check operation		•		•		•		•		•		•		•		•		•		•		•	
Brake System – check damage/leaks, pad thickness, fluid level		•		•		•		•		•		•		•		•		•		•		•	
Wheels – rotate front to rear		•		•		•		•		•		•		•		•		•		•		•	
Airbag System – check function/damage*		•		•		•		•		•		•		•		•		•		•		•	
Battery – check electrolyte level		•		•		•		•		•		•		•		•		•		•		•	
Engine – check for leaks				•		•		•		•		•		•		•		•		•		•	
Pollen Filter – replace				•		•		•		•		•		•		•		•		•		•	
Cooling System – check level				•		•		•		•		•		•		•		•		•		•	
Transmission – check for leaks**				•		•		•		•		•		•		•		•		•		•	
Tires/Spare – check condition				•		•		•		•		•		•		•		•		•		•	
Driveshaft – check boots				•		•		•		•		•		•		•		•		•		•	
OBD – check DTC memory				•		•		•		•		•		•		•		•		•		•	
Door Hinge – lube				•		•		•		•		•		•		•		•		•		•	
Headlights – check and adjust if necessary				•		•		•		•		•		•		•		•		•		•	
Exhaust System – check for damage and leaks				•		•		•		•		•		•		•		•		•		•	
Sunroof Frame – clean and lubricate				•		•		•		•		•		•		•		•		•		•	
Road Test				•		•		•		•		•		•		•		•		•		•	
Power Steering – check fluid level									•									•					
Brake Fluid***									•									•					
Check ATF and Differential for leaks and level; add if necessary									•									•					
Front Axle – check dust seals, ball joints, tie rods									•									•					

*Airbag System – visual check every 12 months regardless of mileage **Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage

Soft top – check function and roll-over protection with cloth top open every 2 years or 20,000 miles (32,000 km), whichever comes first