



2003 Maintenance Schedule VR6

Kilometers Miles	8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160	168	
	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105	
Engine Oil – change	•	•		•		•		•		•		•		•		•		•		•		•
Engine Filter – change	•	•		•		•		•		•		•		•		•		•		•		•
V-belt/Ribbed Belt – check								•								•						
Spark Plugs – replace								•								•						
Air Cleaner – replace filter								•								•						
W/W Fluid – check level		•		•		•		•		•		•		•		•		•		•		•
Auto-Shift Lock – check operation		•		•		•		•		•		•		•		•		•		•		•
Brake System – check damage/ leaks, pad thickness, fluid level		•		•		•		•		•		•		•		•		•		•		•
Wheels – rotate front to rear		•		•		•		•		•		•		•		•		•		•		•
Airbag System – check function/ damage*		•		•		•		•		•		•		•		•		•		•		•
Battery – check electrolyte level		•		•		•		•		•		•		•		•		•		•		•
Engine – check for leaks				•				•				•				•				•		•
Pollen Filter – replace				•				•				•				•				•		•
Cooling System – check level				•				•				•				•				•		•
Transmission – check for leaks**				•				•				•				•				•		•
Tires/Spare – check condition				•				•				•				•				•		•
Driveshaft – check boots				•				•				•				•				•		•
OBD – check DTC memory				•				•				•				•				•		•
Door Hinge – lube				•				•				•				•				•		•
Headlights – check and adjust if necessary				•				•				•				•				•		•
Exhaust System – check for damage and leaks				•				•				•				•				•		•
Sunroof Frame – clean and lubricate				•				•				•				•				•		•
Road Test				•				•				•				•				•		•
Power Steering – check fluid level								•								•						
Brake Fluid***								•								•						
Check ATF and Differential for leaks and level; add if necessary****								•								•						
Front Axle – check dust seals, ball joints, tie rods								•								•						

*Airbag System – visual check every 12 months regardless of mileage **Manual Transmission – check level; add if necessary
 Brake Fluid – change every 2 years regardless of mileage *Change ATF EuroVan only